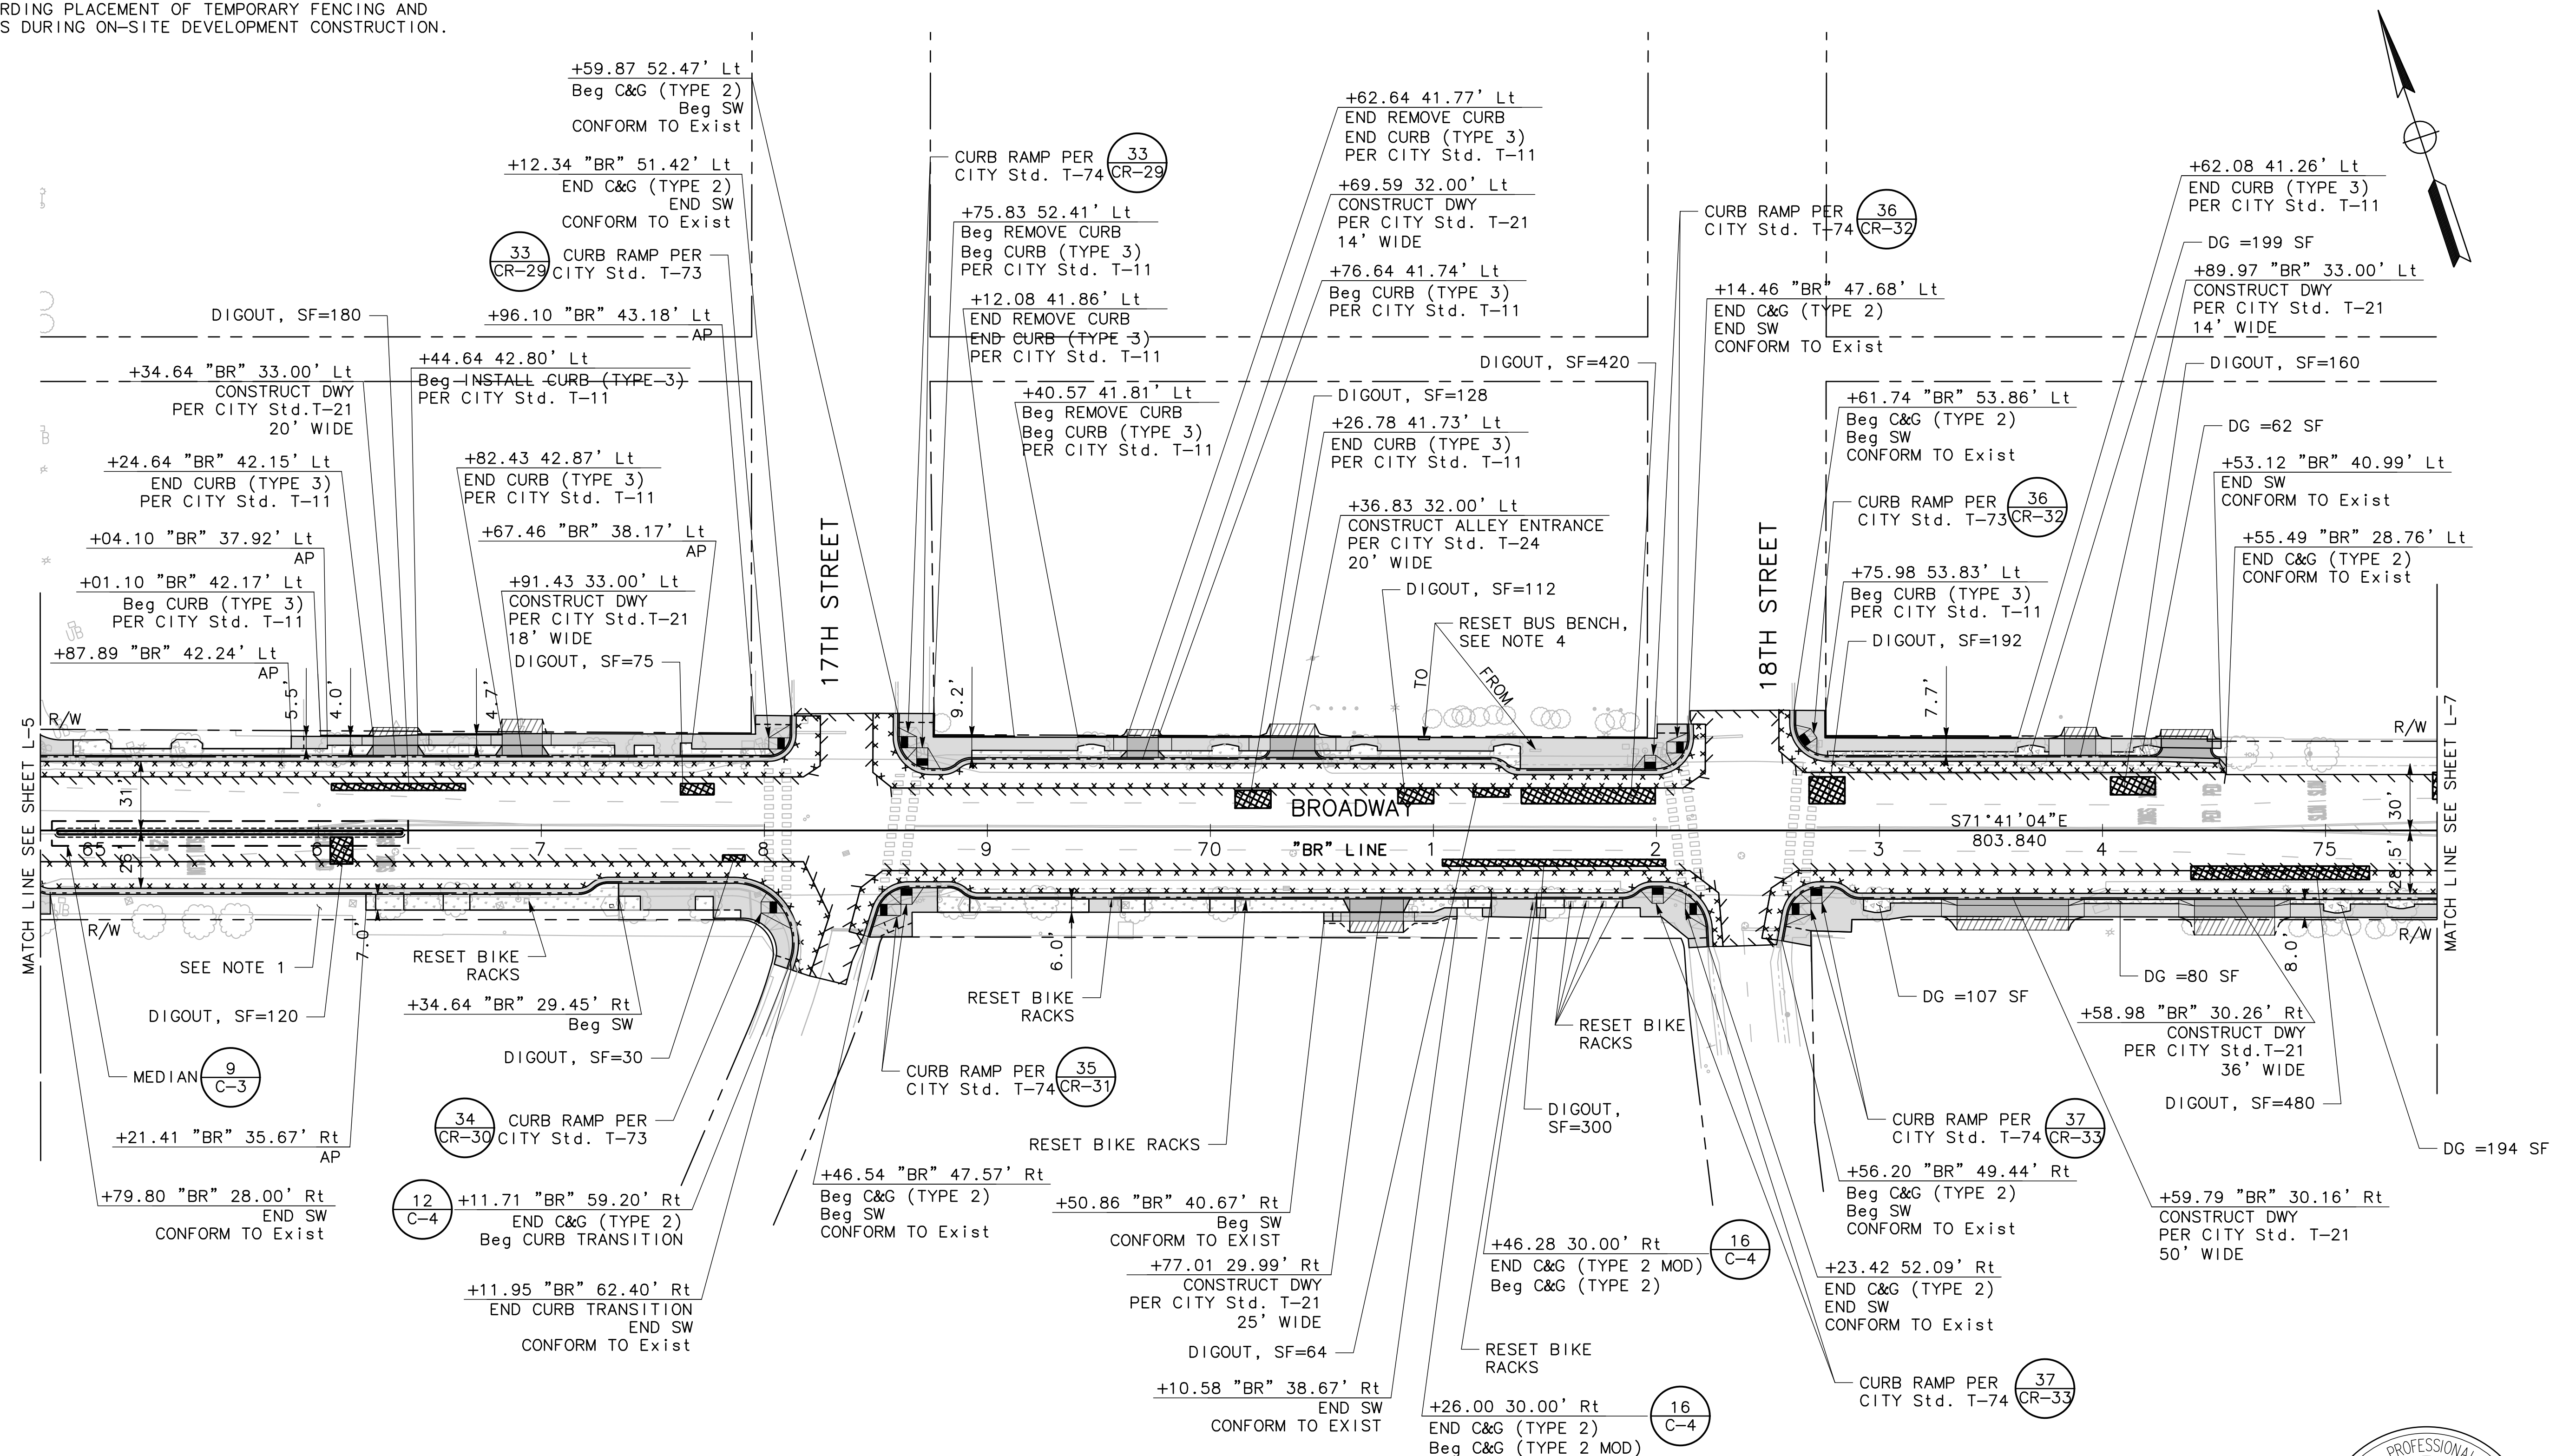


NOTE 1: PLACE AC WEDGE BETWEEN THE NEW TOP OF CURB AND THE EXISTING SIDEWALK SURFACE. COORDINATE WITH ON-SITE DEVELOPMENT REGARDING PLACEMENT OF TEMPORARY FENCING AND PEDESTRIAN ACCESS DURING ON-SITE DEVELOPMENT CONSTRUCTION.

[illegible]